



23780018

Keypad Lock

Installation Instructions
Model FE595



Tools Needed

- Phillips screwdriver
 - Tape Measure
 - Pencil
- Optional**
- Flathead Screwdriver
 - Wood Block
 - Hammer

Additional Parts

 
 
Pin Wrench



Optional Latch Faceplate



9V Battery

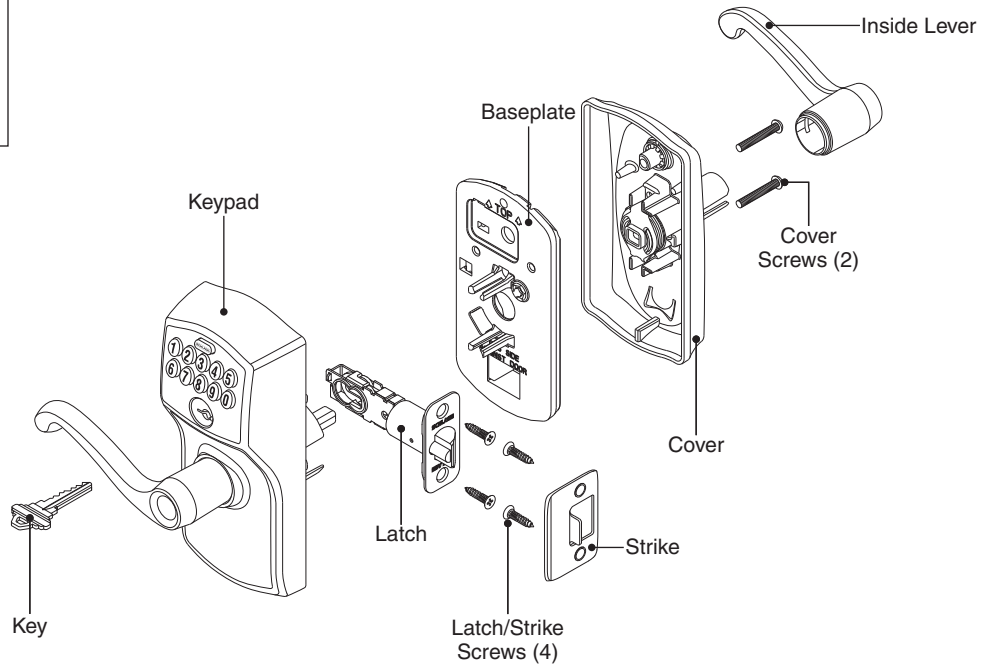

Prepare for Installation

 
IMPORTANT NOTES

- DO NOT use a power drill for installation!
- Use a screwdriver to remove product from packaging.
- Install and test lock with door open to avoid being locked out.

A


Check door dimensions.

See consumer.schlage.com/Service-Support for door preparation instructions if dimensions are different.


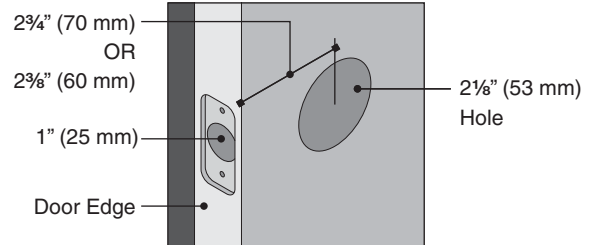
**B**

Change faceplate, if necessary.

 Choose the drawing that matches your door edge. If the hole has no mortise, change to the circular faceplate.

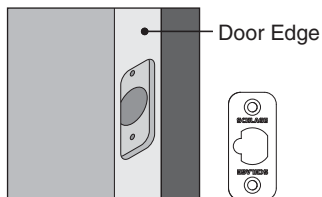

No change necessary.

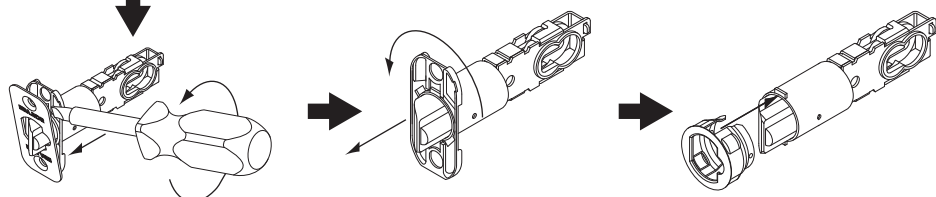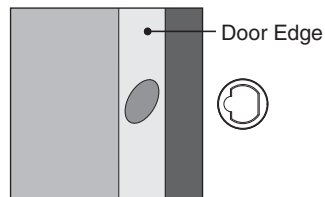  
OR

Install Lock

1


Install latch.

 Make sure latch angle faces door jamb.

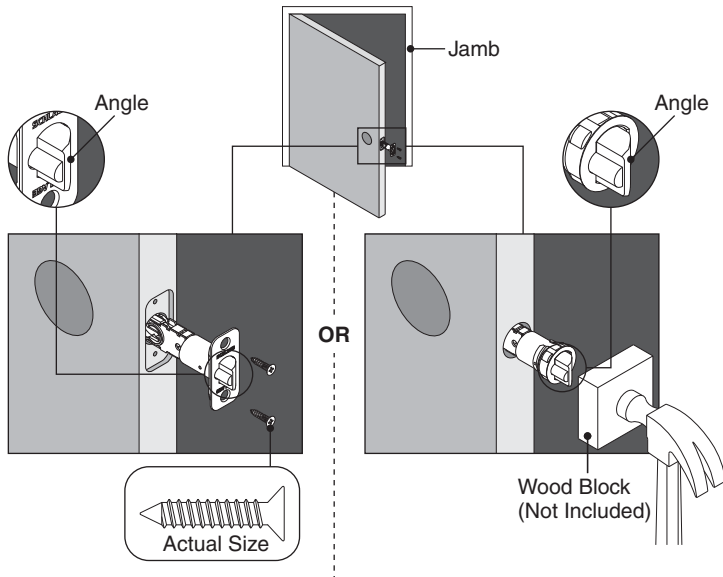

2

 
Install strike onto door jamb.

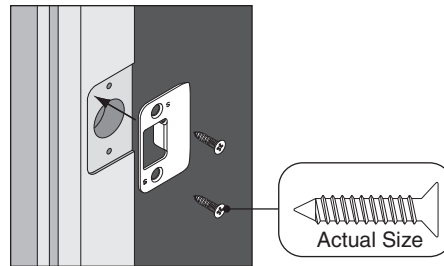

3


Prepare keypad.

 Remove sticker from hands-free post.

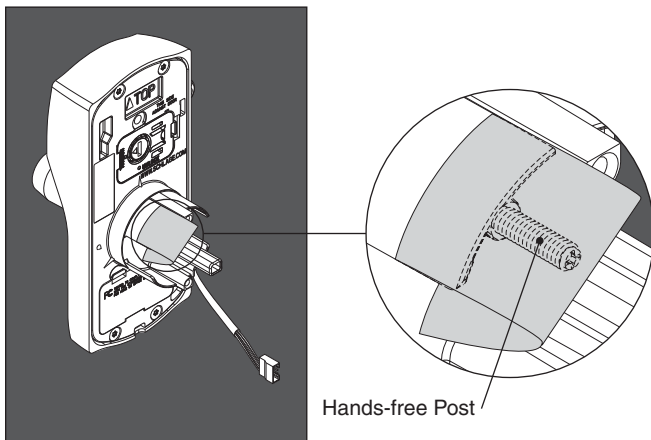

4

 Install keypad.

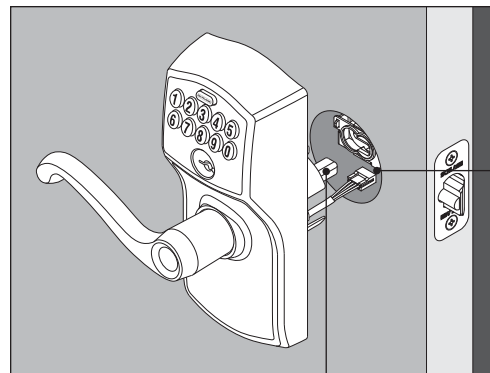


IMPORTANT
Wire must slide under latch.

Bar should slide smoothly through hole in latch. If not, check door dimensions.

5


Adjust hands-free post.

 The hands-free post holds the keypad and baseplate together while installation is completed.

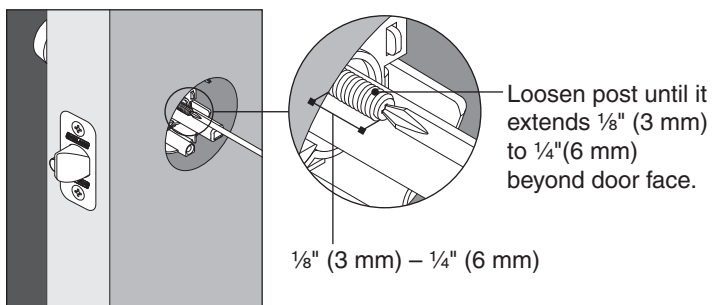


6

 Install baseplate.

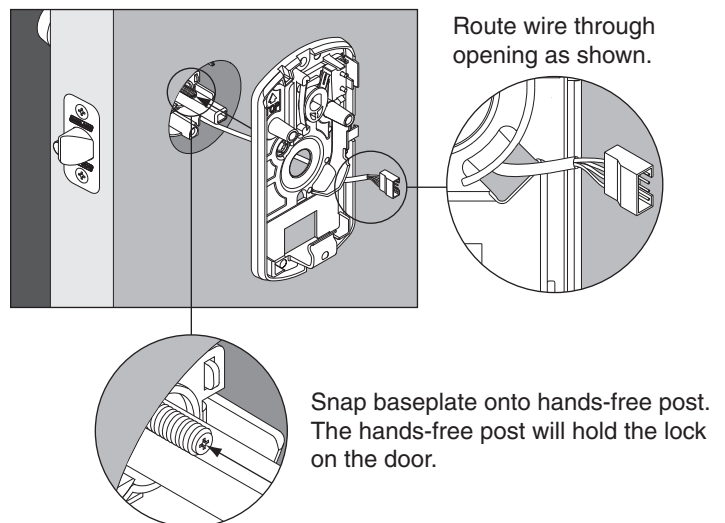


7 Connect wire and battery.

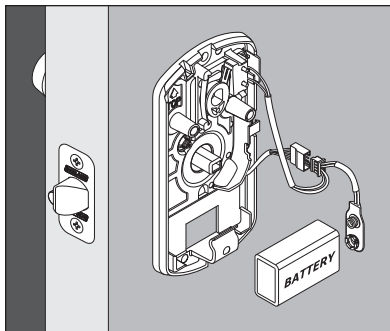 


Lock will beep when battery is connected.


 
8 Place battery in holder and tuck wires.

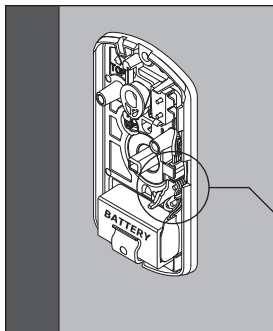

 
Route wires behind curved piece and tuck, using tabs, so they will not be pinched by the cover.

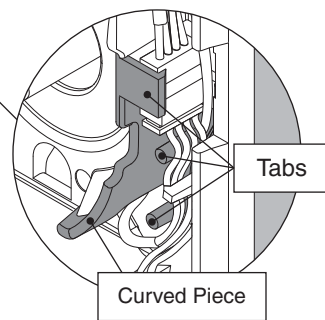

9 Install cover.

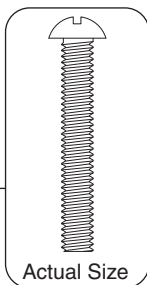 
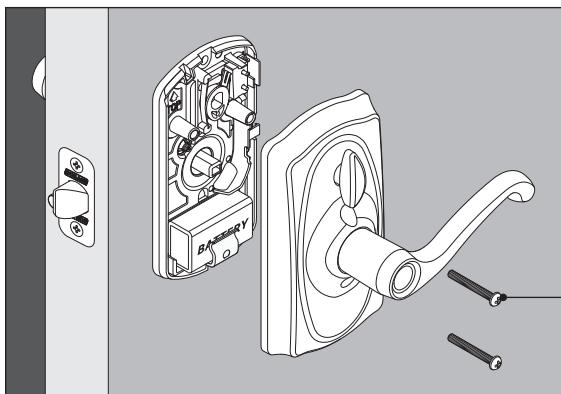 


10 If needed, switch levers.

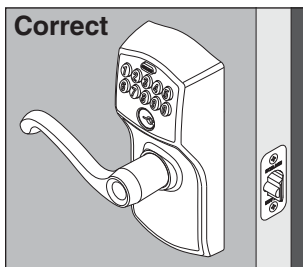 


If your lever looks like this, then no change is necessary.
If your lever does not look like this, switch the levers by following the steps below.

  
OR

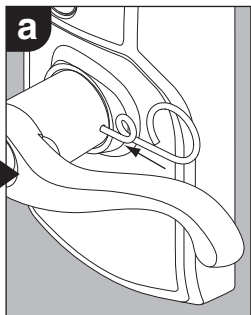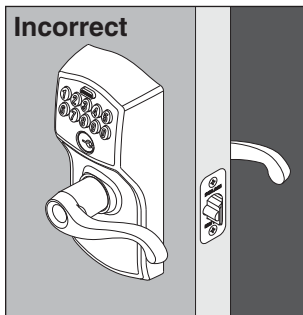

 
Insert the pin wrench into the hole in the lever. Push in and hold.

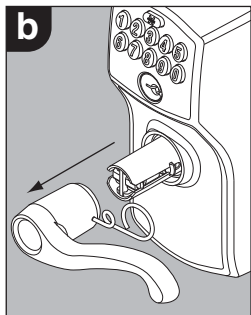

Pull the lever off.

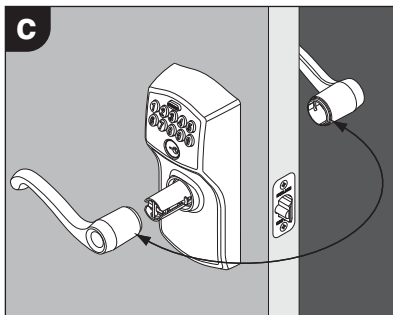 

 Repeat steps a and b to remove the lever from the other side of the door. Switch the levers.

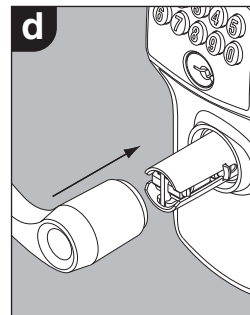


Push each lever back into place.


Test Lock

a Unlock.

 1. Find User Code A on the **Keypad Locks Programming Guide**.
2. Enter User Code A (four digits) into the keypad.
3. Rotate and then release lever.

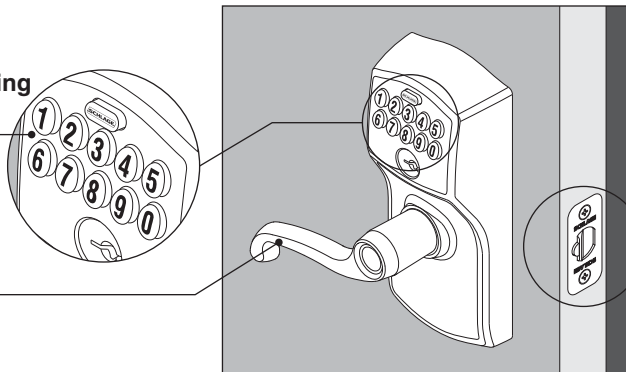

Did latch retract and then extend?

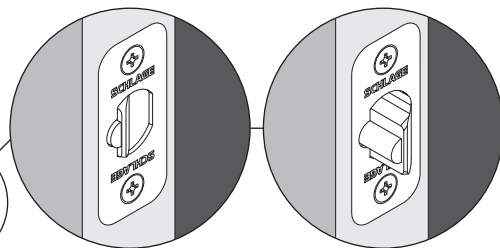 

Yes. Lock is installed correctly.

No. Latch retracted but did not extend (latch bound). Check step 4.

No. Nothing happened. Check steps 7 and 8.

Program Lock

 
 
See the **Keypad Locks Programming Guide** that came with this lock. See the **Keypad Locks User Guide** for additional information. Go to keypad.schlage.com for videos and more. Register your product at RegisterMySchlage.com.

Lock Removal

If you need to remove the lock from the door, you must first release the hands-free post. If you do not release the hands-free post before removal, you will damage the lock.

i Reverse steps 9, 8, and 7

ii Release hands-free post.

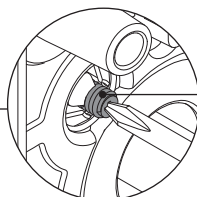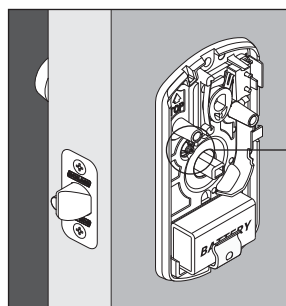

Tighten post until plate can be removed. **DO NOT** over tighten.

iii Reverse remaining steps.

Schlage Customer Service

Calling From:

U.S.A.: (888) 805-9837

Canada: (800) 997-4734

Mexico: 018005067866

Servicio de atención al cliente de Schlage

Si llama desde:

EUA: (888) 805-9837

Canadá: (800) 997-4734

México: 018005067866

 
Service à la clientèle de Schlage

Tout appel provenant de :

É-U: (888) 805-9837

Canada : (800) 997-4734

Mexique : 018005067866

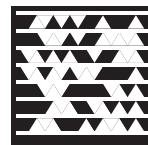

Get the free mobile app at <http://gettag.mobi>.

Obtenga la aplicación móvil gratis en **gettag.mobi**.

Obtenez l'application gratuite pour mobile au **gettag.mobi**.

Lifetime Limited Mechanical and Finish Warranty and 1-Year Limited Electronics Warranty

Subject to the terms and conditions of this warranty, Schlage extends a lifetime limited mechanical and finish warranty and a one-year limited electronics warranty to the original consumer user ("Original User") of our Schlage brand product ("Product") against defects in material and workmanship, as long as the Original User occupies the residential premises upon which the Product was originally installed.

What Schlage will do: Upon return of the defective Product to Schlage, Schlage's sole obligation, at its option, is to either repair or replace the Product, or refund the original purchase price in exchange for the Product.

Original User: This warranty only applies to the Original User of Products. This warranty is not transferable.

What is not covered: The following costs, expenses and damages are not covered by the provisions of this limited Warranty: (i) labor costs including, but not limited to, such costs as the removal and reinstallation of Product; (ii) shipping and freight expenses required to return Product to Schlage; and (iii) any other incidental, consequential, indirect, special and/or punitive damages, whether based on contract, warranty, tort (including, but not limited to, strict liability or negligence), patent

infringement, or otherwise, even if advised of the possibility of such damages. Some local laws do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitation may not apply to you.

The provisions of this warranty do not apply to Products: (i) used in commercial applications; (ii) used in common area applications; (iii) used for purposes for which they are not designed or intended; (iv) which have been subjected to alteration, abuse, misuse, negligence or accident; (v) which have been improperly stored, installed, maintained or operated; (vi) which have been used in violation of written instructions provided by Schlage; (vii) which have been subjected to improper temperature, humidity or other environmental conditions; or (viii) which, based on Schlage's examination, do not disclose to Schlage's satisfaction non-conformance to the warranty. Additionally, this warranty DOES NOT COVER scratches, abrasions, or deterioration due to the use of paints, solvents or other chemicals.

Exclusions: Oil Rubbed Bronze finish (613) is designed to improve over time and change in appearance, creating a living finish through daily use and thus, finish discoloration is not applicable to the above warranty.

Additional terms: Schlage does not authorize any person to create for it any obligation or liability in connection with the Product. Schlage's

maximum liability hereunder is limited to the original purchase price of the Product. No action arising out of any claimed breach of this warranty by Schlage may be brought by the Original User more than one (1) year after the cause of action has arisen.

How local law applies: This warranty gives you specific legal rights, and you may also have other rights as otherwise permitted by law. If this Product is considered a consumer product, please be advised that some local laws do not allow limitations on incidental or consequential damages or how long an implied warranty lasts, so that the above limitations may not fully apply. Refer to your local laws for your specific rights under this warranty.

Guaranteed Fit Program: Schlage products are designed to fit standard residential door preparations and retrofit existing tubular locks. Note: Mortise locks and preparations are not considered standard and are not guaranteed under this program. During the initial installation, if there is a problem with the Product's performance, the Original User may simply contact Schlage Customer Service at 888-805-9837 in the U.S. and Canada or 800-506-7866 in Mexico for assistance.

Program and warranty claims: If you encounter a residential door preparation or fit issue under the Guaranteed Fit Program or have a claim under this warranty, please contact Schlage Customer Service for repair, replacement or refund of the original purchase price in exchange for the return of the Product to Schlage.



©2011 Schlage Lock Company
Printed in U.S.A.
23780018 Rev. 01/11-a

Cerradura con teclado

Instrucciones de Instalación
Modelo FE595

Verrou à clavier numérique

Instructions d'installation
Modèle FE595



Herramientas necesarias

Outils nécessaires

- Destornillador Phillips
- Cinta métrica
- Lápiz

- Tournevis cruciforme
- Ruban à mesurer
- Crayon

Opcional

- Destornillador de cabeza plana
- Bloque de Madera
- Martillo

En option

- Tournevis à tête plate
- Bloc en bois
- Marteau

Piezas adicionales Pièces additionnelles

 
 
Llave para clavija
Clef à ergots



Placa frontal del pestillo opcional
Têtière de loquet en option



Batería de 9 V
Pile de 9 V

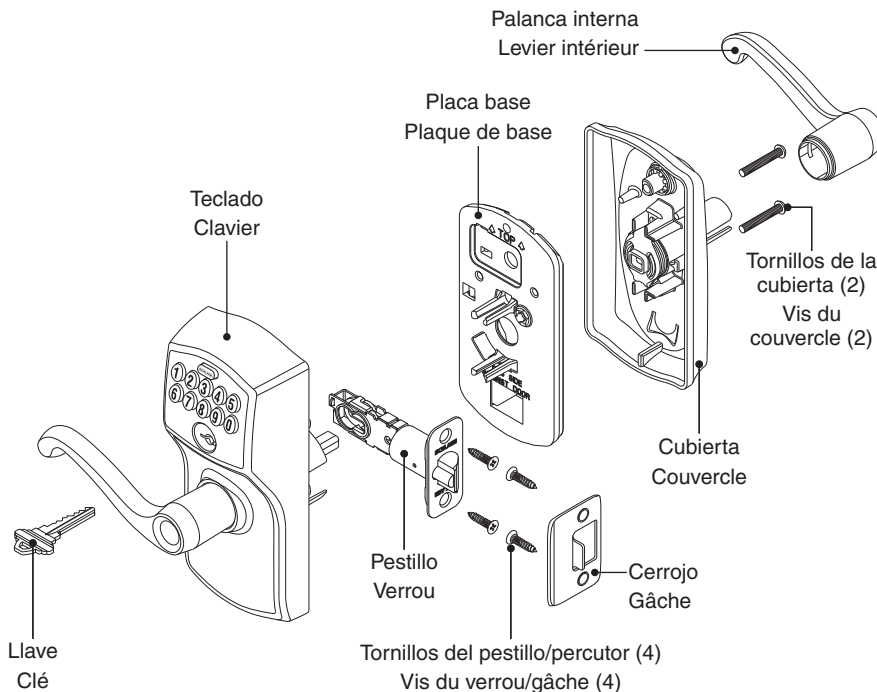

Prepare for Installation

NOTAS IMPORTANTES

- ¡NO utilice un taladro eléctrico para la instalación!
- Utilice un destornillador para retirar el producto del embalaje.
- Instale la cerradura y pruébela con la puerta abierta para evitar quedarse afuera.

REMARQUES IMPORTANTES

- N'utilisez PAS une perceuse électrique pour l'installation!
- Utilisez un tournevis pour retirer le produit de son emballage.
- Installez la serrure et faites un essai en maintenant la porte ouverte pour éviter d'être embarré à l'extérieur.

 
A

Verifique las dimensiones de la puerta.

Vea consumer.schlage.com/Service-Support para conocer las instrucciones acerca de la preparación de la puerta, en caso de que las dimensiones fueran diferentes.

Vérifiez les dimensions de la porte.


Si les dimensions sont différentes, visiter le site consumer.schlage.com/Service-Support pour plus d'information à propos des instructions de préparation.

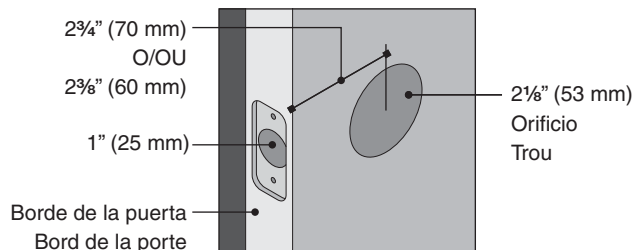

B

Si es necesario, cambie la placa frontal.

 
Elija el dibujo que coincida con el borde de su puerta. Si el orificio no tiene mortaja, cambie por la placa frontal circular.

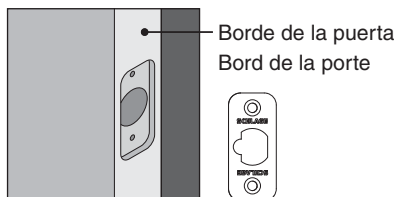

No es necesario realizar cambios.


Aucun changement requis.

 O
OU

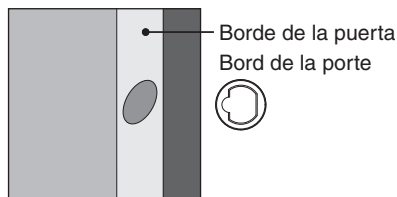

Changez la tèteière au besoin.

 Sélectionnez le dessin qui correspond à votre bord de porte. Pour un orifice sans mortaise, optez pour une tèteière circulaire.

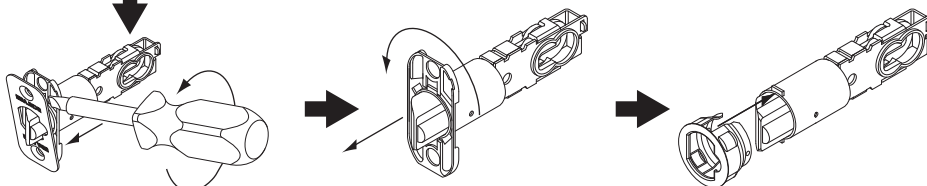

Instale la traba

 
1

Instalar el pestillo.

Asegúrese de que el ángulo del pestillo mire hacia la jamba de la puerta.

Installez le verrou.

Assurez-vous que l'angle du loquet fait face au montant de la porte.

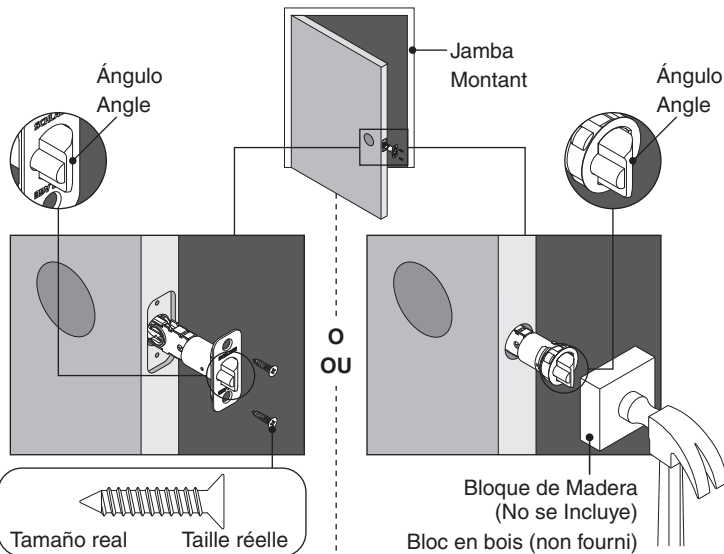


Installez la serrure

2

Instale el cerrojo en la jamba de la puerta.

 Installez la gâche sur le montant de la porte.

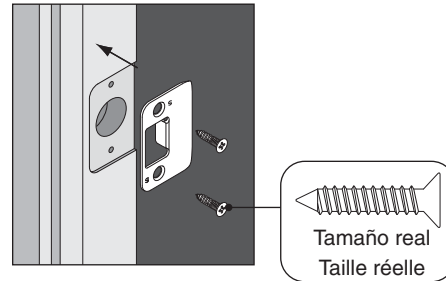


3

Prepare el teclado.

Quite la calcomanía del terminal manos libres.

Préparez le clavier numérique.

 
Retirer l'autocollant du tourniquet.

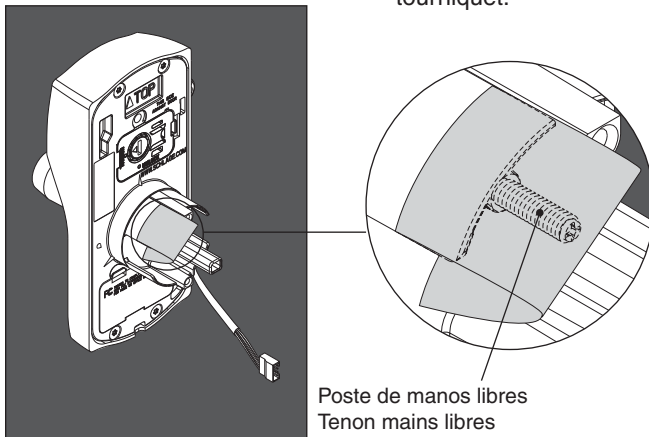

4

Instalar el teclado.

 Installer le clavier.

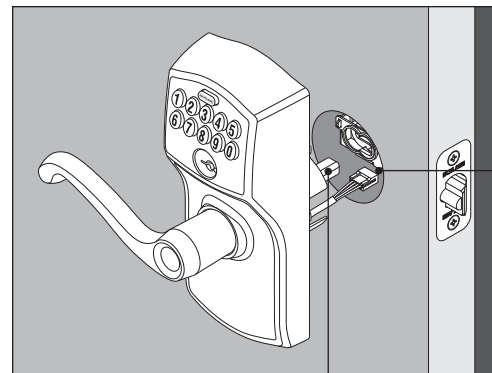

IMPORTANT

El cable debe deslizarse por debajo del pestillo.

IMPORTANT

Le fil doit glisser sous le loquet.

La barra debe deslizarse suavemente por el orificio del pestillo. Si no lo hace, verifique las dimensiones de la puerta.

La barre devrait glisser aisément dans l'orifice situé dans le loquet. Si ce n'est pas le cas, vérifiez les dimensions de la porte.

 
5

Ajuste el poste de manos libres.

El poste de manos libres mantiene el teclado y la placa base unidos hasta que finalice la instalación.

Réglez le tenon mains libres.


Le tenon mains libres retient ensemble le clavier numérique et la plaque de base tandis que vous achevez l'installation.

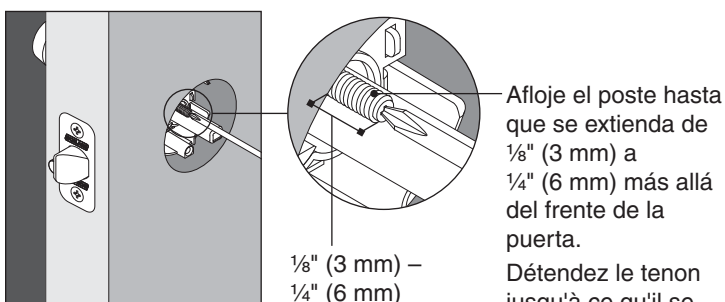

6

Instalar la placa base.

 Installer la plaque de base.

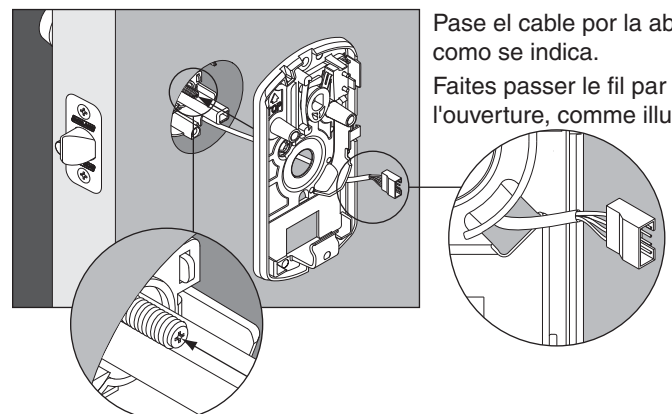


Fije la palca base en el poste de manos libres. El poste de manos libres sostendrá la cerradura en la puerta.

Enclenchez la placa de base au tenon mains libres. Le tenon mains libres fixera la serrure à la porte.

7

 Conecte el cable y la batería.

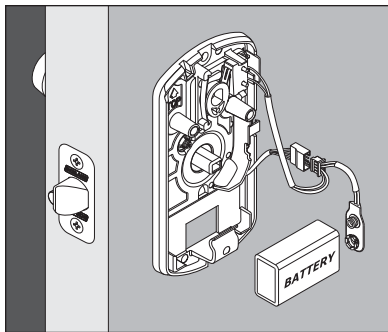


La cerradura emitirá un pitido cuando se conecte la batería.
La serrure émettra un bip lorsque la pile est branchée.

Branchez le fil et la pile.

8

 Ubique la batería en el soporte y coloque los cables.

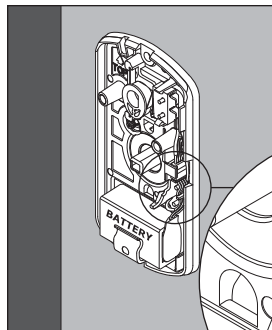

Pase los cables por detrás de la pieza curva y colóquellos, utilizando lengüetas, de manera que no los pellizque la cubierta.

 
 
Faites passer les fils derrière la pièce courbée et insérez-les en utilisant les onglets pour éviter leur coincement par le couvercle.

Pieza curva
Pièce courbée

Lengüetas
Onglets

9

Instale la cubierta.

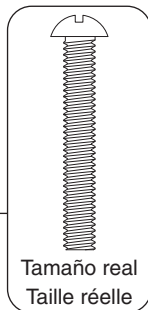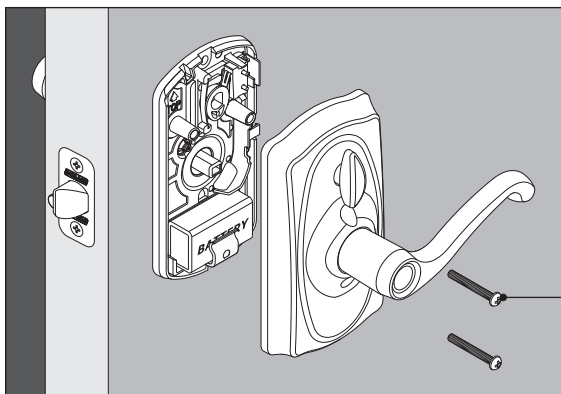


Tamaño real
Taille réelle

Installer le couvercle.

10

 Si es necesario, intercambie las palancas.

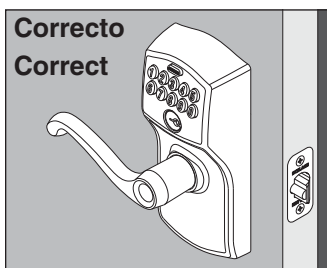

Correcto
Correct

Si su palanca se ve como esta, no es necesario realizar ningún cambio.
Si su palanca no se ve como esta, intercambie las palancas siguiendo los pasos que se indican a continuación.

 
Au besoin, échangez les leviers.

Si votre levier ressemble à cette illustration, il n'y a pas lieu de changer quoi que ce soit.
Si votre levier ne ressemble pas à cette illustration, échangez les leviers en procédant de la façon suivante.


O/OU




Incorrecto
Incorrect

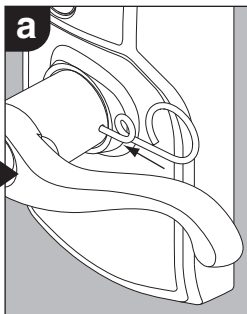

 Introduzca la llave inglesa en el orificio de la palanca. Presione y sostenga.
Insérez la clé à ergot dans l'orifice du levier. Poussez pour enfoncer et retenez.

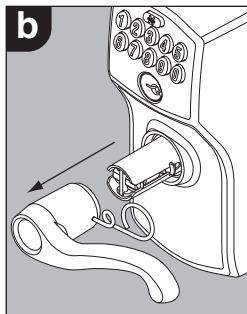


Retire la palanca.
Retirez le levier.

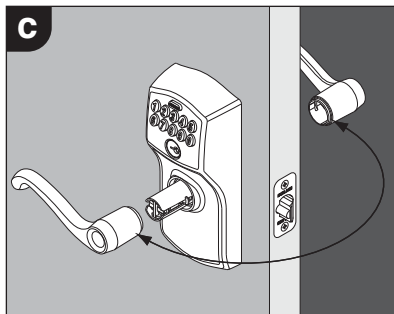 

Repita los pasos a y b para retirar la palanca desde el otro lado de la puerta. Intercambie las palancas.

 Répétez les étapes a et b pour retirer le levier de l'autre côté de la porte. Faites basculer les leviers.

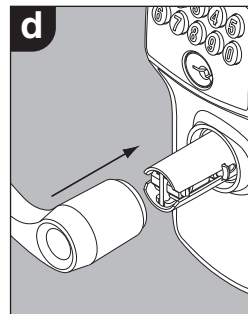

Empuje cada palanca nuevamente hacia su lugar.
Poussez chaque levier en place.

