

# C-350/C-600 SERIES SLIDING DOOR KIT INSTRUCTION SHEET FOR 3/4" TO 1-3/8" DOORS



## PARTS LIST (FOR 1 DOOR KIT)



(\*ALL PARTS FOR C-600 KIT ARE 2X QUANTITY OF C-350 KIT)


### SPECIFICATIONS:

- LOAD CAPACITY: 75 LBS PER DOOR.
- CAN BE MOUNTED SIDE BY SIDE FOR BY-PASS APPLICATIONS
- 3 NYLON WHEELS PER HANGER.
- FEATURES VERTICAL ADJUSTMENT BY THREADED TOP PLATE AND LOCK-NUT.

## INSTALLATION INSTRUCTIONS


### STEP 1

DETERMINE DOOR SIZE/HEADER HEIGHT BASED ON DIMENSIONS SHOWN IN DETAIL VIEWS AND CLEARANCE REQUIRED BELOW DOOR:  
 -MINIMUM OPENING HEIGHT (A) = DOOR HEIGHT + 2-5/8"  
 -MAXIMUM OPENING HEIGHT (A) = DOOR HEIGHT + 3-1/2"

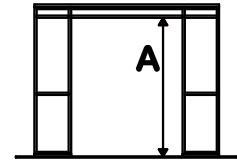


### STEP 2

CUT TRACK TO LENGTH. TRACK LENGTH SHOULD BE EQUAL TO FINISHED OPENING SIZE LESS 1/8". INSERT C-350 HANGERS INTO TRACK AND SECURE TRACK TO HEADER WITH #8 X 3/4" SCREWS (6)\*. **NOTE: CLIP SCREWS MUST BE ACCESSIBLE AND FACE SAME SIDE OF OPENING (I.E. INSIDE OF CLOSET).**

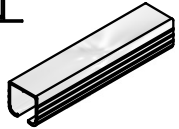

### STEP 3

A) LOCATE CLEARANCE HOLE FOR HANGER STUD 3-1/2" FROM EACH EDGE OF DOOR. DRILL WITH 3/8" BIT AT LEAST 1-1/2" DEEP. B) CENTER TOP PLATE OVER HOLE WITH FLAT SIDE UP, MARK SCREW HOLE LOCATIONS AND PRE-DRILL WITH 1/8" BIT AT LEAST 1" DEEP.

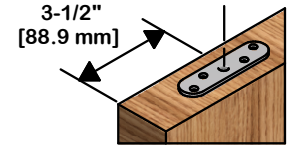


### STEP 4

MOUNT TOP PLATES ON DOOR AND SECURE WITH #10 X 1-1/4" SCREWS (4 PER TOP PLATE).

### STEP 5

USING A PHILLIPS SCREWDRIVER, REMOVE THE CLIP SCREWS ON HANGER TO REMOVE BOLT. PLACE ONE 5/16"-24 HEX NUT ON BOLT AND SCREW BOLT INTO TOP PLATE ON THE DOOR.

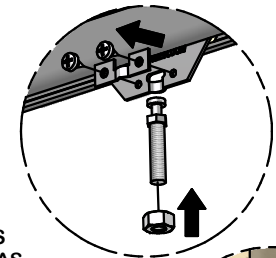


### STEP 6

PREPARE DOOR FOR INSTALLATION OF OPTIONAL PRODUCTS SUCH AS GUIDE CHANNELS, CUP PULLS, DOOR LOCKS, ETC., AS REQUIRED. INDIVIDUAL INSTRUCTIONS ARE PROVIDED WITH THE RESPECTIVE PRODUCT.


### STEP 7

LOCATE C-1202 GUIDES AND SECURE TO FLOOR WITH #8 X 3/4" SCREWS (4). IT MAY BE NECESSARY TO INSTALL DOOR, DETERMINE GUIDE LOCATION, REMOVE DOOR AND THEN SECURE GUIDES TO FLOOR. IF USING OPTIONAL C-201 GUIDE CHANNEL, INSTALL C-200 GUIDE IN PLACE OF THE C-1202 GUIDES. IF USING C-600 SERIES AND C-238 GUIDE THRESHOLD, INSTALL IN PLACE OF C-1201 AND C-1202 GUIDES.

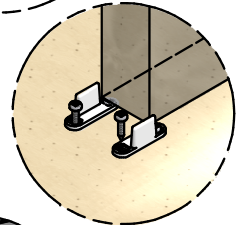


### STEP 8

LOCATE DOOR UNDER HANGERS AND LIFT TO PLACE BOLTS INTO HANGER SLOT AND SECURE WITH THE CLIPS AND SCREWS PREVIOUSLY REMOVED IN STEP 5. DO NOT OVER TIGHTEN SCREWS.

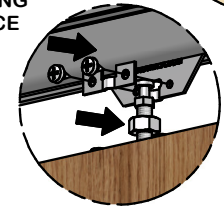

### STEP 9


ADJUST DOOR HEIGHT AND PLUMB VIA HEX SECTION OF BOLT WITH 3/8" WRENCH. LOCK ADJUSTMENT BY TIGHTENING HEX NUT AGAINST TOP PLATE. RE-TIGHTEN CLIP SCREWS.

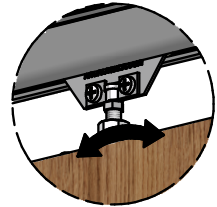

### STEP 10


IF USING OPTIONAL C-100 DOOR STOP, INSTALL IN TRACK AT DESIRED LOCATION.

## DIMENSION DETAILS:

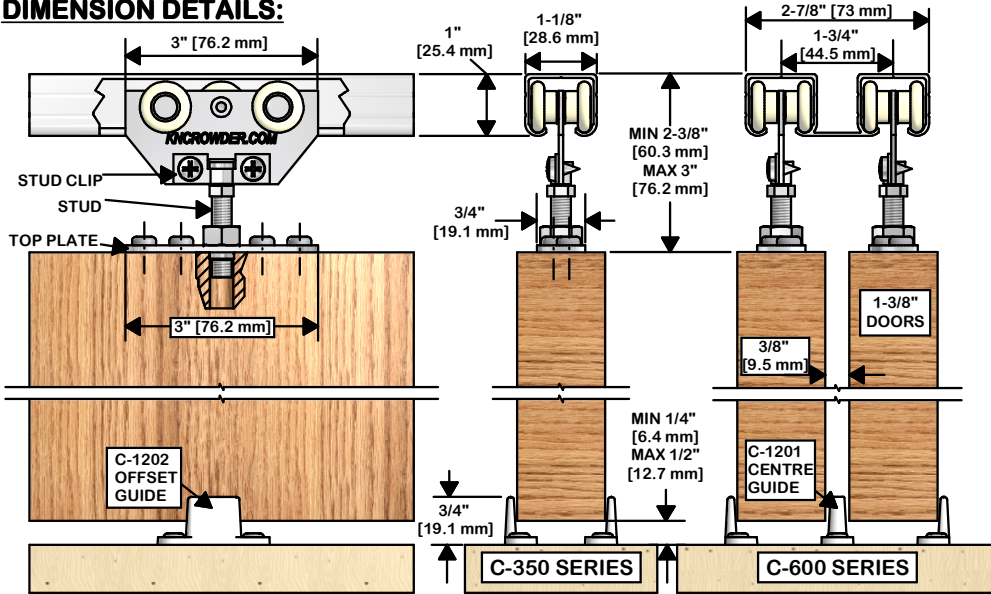


## OPTIONAL PRODUCTS


### GUIDE SYSTEM:

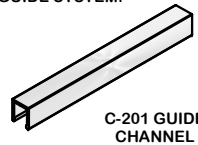

C-201 GUIDE CHANNEL

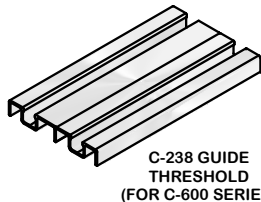

C-238 GUIDE THRESHOLD (FOR C-600 SERIES)

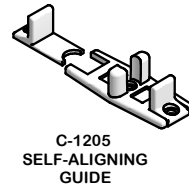


C-1205 SELF-ALIGNING GUIDE




C-100 DOOR STOP



C-200 GUIDE C-200B SPRING LOADED GUIDE

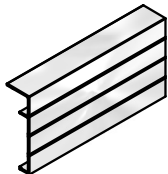

C-130 FASCIA

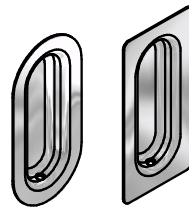

C-70 DOOR PULLS C-75 DOOR PULLS



C-35 DOOR LOCK



**K.N. CROWDER MFG. INC.**  
 1220 BURLOAK DRIVE  
 BURLINGTON, ONTARIO, CANADA, L7L 6B3  
 TELEPHONE: 905-315-9788 - FAX: 905-315-8090  
 TOLL FREE FAX: 1-800-567-0123

**K.N. CROWDER INC.**  
 210 EIGHTH STREET SOUTH  
 LEWISTON, NEW YORK, U.S.A. 14092  
 TOLL FREE TELEPHONE: 1-866-999-1KNC (1562)  
 TOLL FREE FAX: 1-800-567-0123

WEBSITE: [www.kncrowder.com](http://www.kncrowder.com) -- E-MAIL: [customerservice@kncrowder.com](mailto:customerservice@kncrowder.com)