



INSTALLATION DETAILS AND STUD OPENING DIMENSIONS

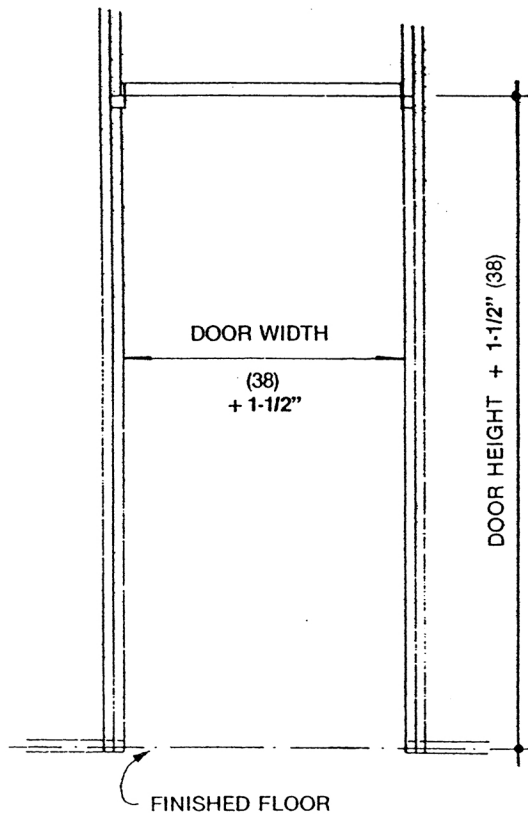


TYPICAL "NIB WALL" CONDITION

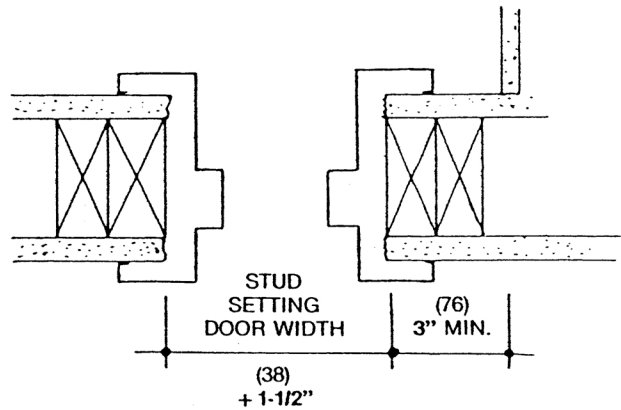

NOTE: A MINIMUM OF 3" IS REQUIRED ON NIB WALLS.

INSTALLATION DETAILS

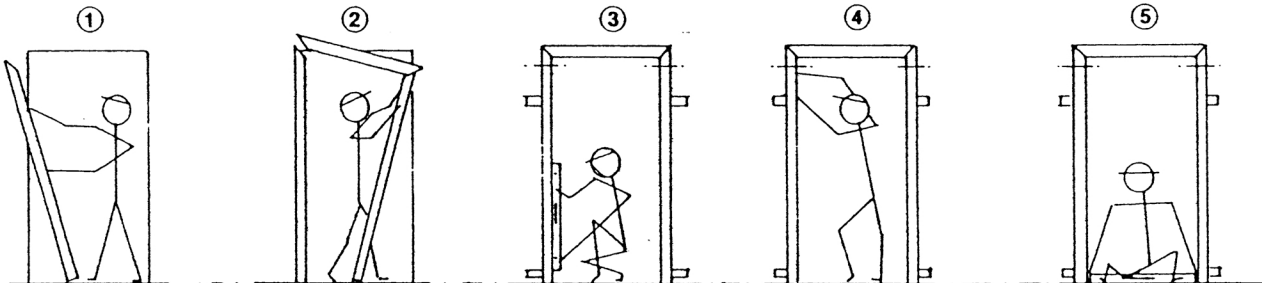

① Place strike jamb in position on wall.

② Place header into position making sure the end of the header is under the head clip on the strike jamb. Now install the hinge jamb.

③ Plumb one jamb, strike or hinge, depending on wall. On short wall it is better to plumb the hinge jamb first then fasten the base and jamb anchors.

④ Turn tension anchor screws counter clockwise to give tight fit on the wall and neat mitre line.

⑤ Square the head. Adjust the remaining jamb to give an opening width of 3/16" (5) over the actual door width. Tighten tension anchor (counter clockwise). Fasten the base and jamb anchor.

ORIGINAL DATE OF ISSUE — MARCH 1983



REVISIONS

#

DATE

NOTES

DW250 detail change and installation sheet.