



611 Door Knocker

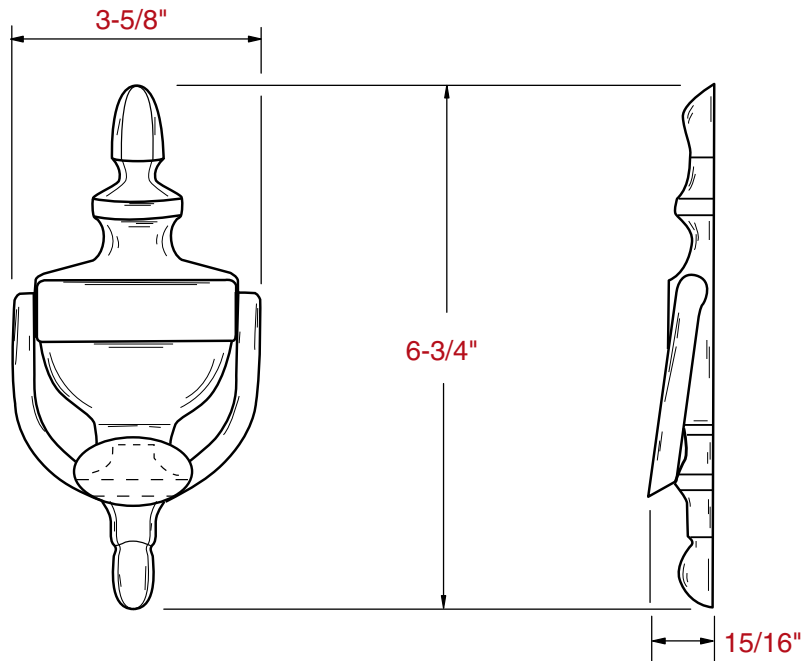

FRONT

SIDE

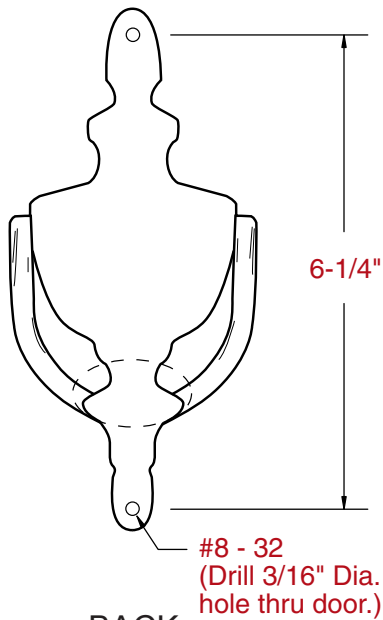

BACK

CAST BRASS MATERIAL

Not To Scale

Template No.
T-611
Rev. 4/28/08

NOTE: Rockwood reserves the right to make product changes and is not responsible for obsolete template errors. To ensure your template is current, please visit our website at www.rockwoodmfg.com or call us at 800-458-2424.