


10-Line locks on 1-3/8" Door 1- Prefix Installation Instructions

SARGENT
ASSA ABLOY

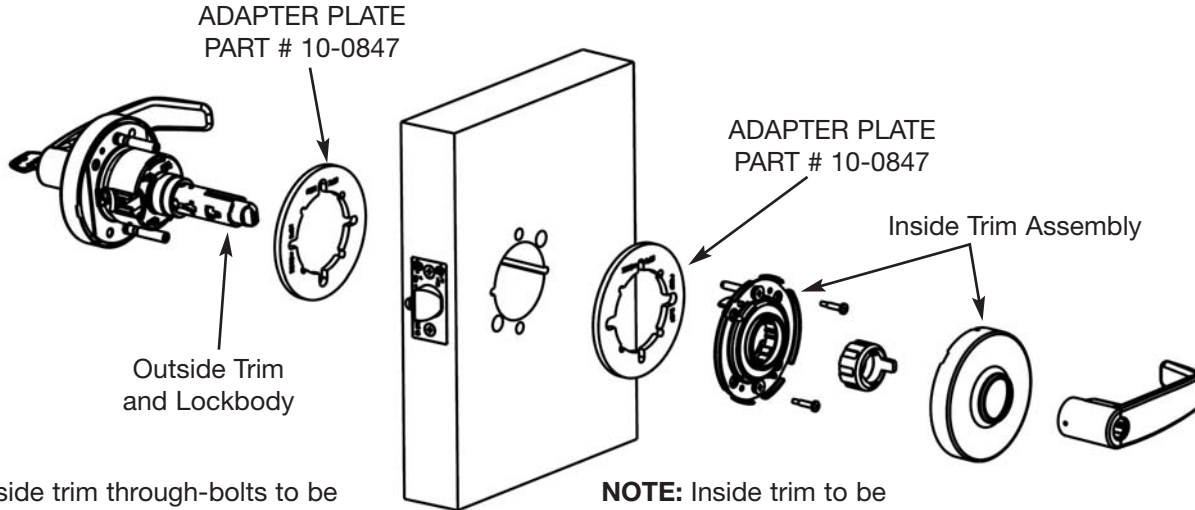

NOTE: Outside trim through-bolts to be aligned with through-bolt holes marked on adapter plate

NOTE: Inside trim to be aligned with holes marked screw slot

Install (1) adapter plate between door and rose assemblies (both sides) For lock installation, refer to instruction sheet A7133G