


# 7800/8200, 7900 & 9200 Mortise Lock with One-Sided Trim Only INSTALLATION INSTRUCTIONS

**SARGENT**  
**ASSA ABLOY**

For assistance, contact SARGENT at 800-727-5477 or [www.sargentlock.com](http://www.sargentlock.com)


## Step 1

Slide plate & post assembly through lockbody on the side opposite from the trim

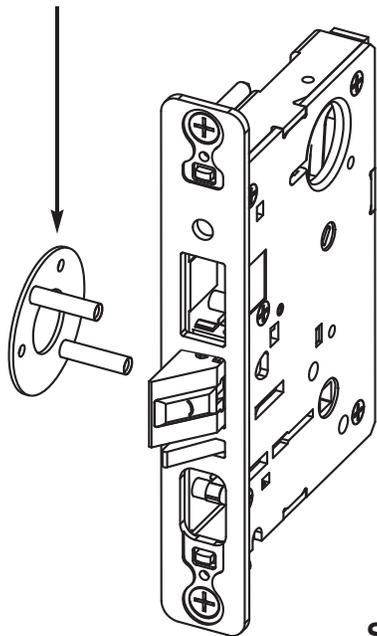


## Step 3

Press lock centering spring onto the lockbody as shown

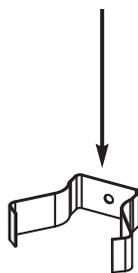

## Step 4

Install lockbody into the door

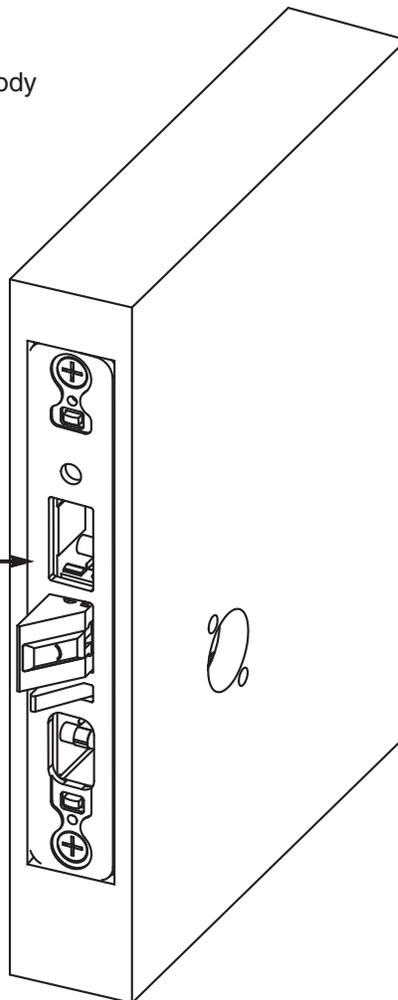


## Step 2

Secure plate & post assembly to the lockbody with (2) lockwashers



## Step 5

Secure surface adapter plate and square spindle with (2) screws and fasten

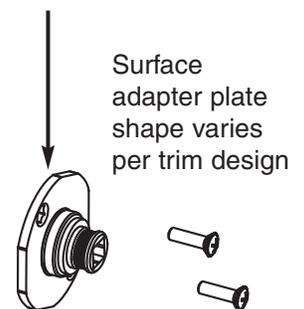

## Step 6 (Not Shown)

Attach rose trim by threading rose onto Surface Adapter Plate or escutcheon trim with SURFACE APPLIED screws provided (except on LS/KS escutcheon). Attach lever with set screw, already provided in the lever (or in separate screw pack for Studio Collection). For additional information, see standard instruction sheet for each product.